


FAQ

Water Dripper

Q. Water does not come out. Why is it?

A. Please try the following:

1. Disassemble the rubber valve cover and ring parts exactly according to the explanation and massage the projection of the rubber valve. Please see the illustration. In this way, the metal ball stuck to the rubber valve can be removed.

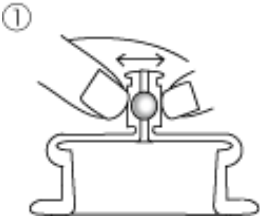

2. If water doesn't drip even if you have done the above, insert a stick with a round end, such as a chopstick, into the hole of the rubber valve and push the metal ball in order to remove it from the rubber valve.

